# R&S®RTB2000 Oscilloscope Specifications



# **CONTENTS**

Definitions	3
Base unit	4
Vertical system	4
Horizontal system	4
Acquisition system	5
Trigger system	5
Waveform measurements	7
Digital voltmeter	7
Frequency counter	7
Mask testing	8
Waveform maths	8
Search function	8
Display characteristics	9
Protocol and logic	9
Miscellaneous	9
Input and outputs	10
General data	11
Options	12
R&S®RTB-B1	12
R&S®RTB-B6	13
R&S®RTB-Bxx bandwidth upgrades	13
R&S®RTB-K1	14
R&S®RTB-K2	14
R&S®RTB-K3	15
R&S®RTB-K15	17
Ordering information	18

### **Definitions**


#### General

Product data applies under the following conditions:

- Three hours storage at ambient temperature followed by 20 minutes warm-up operation
- · Specified environmental conditions met
- · Recommended calibration interval adhered to
- · All internal automatic adjustments performed, if applicable

#### Specifications with limits

Represent warranted product performance by means of a range of values for the specified parameter. These specifications are marked with limiting symbols such as <,  $\leq$ , >,  $\geq$ ,  $\pm$ , or descriptions such as maximum, limit of, minimum. Compliance is ensured by testing or is derived from the design. Test limits are narrowed by guard bands to take into account measurement uncertainties, drift and aging, if applicable.

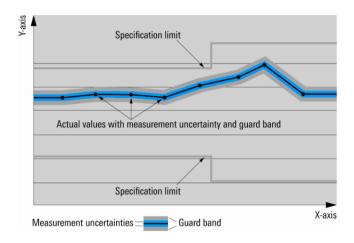

#### Specifications without limits

Represent warranted product performance for the specified parameter. These specifications are not specially marked and represent values with no or negligible deviations from the given value (e.g. dimensions or resolution of a setting parameter). Compliance is ensured by design.

### Typical data (typ.)

Characterizes product performance by means of representative information for the given parameter. When marked with <, > or as a range, it represents the performance met by approximately 80 % of the instruments at production time. Otherwise, it represents the mean value.

#### Nominal values (nom.)

Characterize product performance by means of a representative value for the given parameter (e.g. nominal impedance). In contrast to typical data, a statistical evaluation does not take place and the parameter is not tested during production.

#### Measured values (meas.)

Characterize expected product performance by means of measurement results gained from individual samples.

#### **Uncertainties**

Represent limits of measurement uncertainty for a given measurand. Uncertainty is defined with a coverage factor of 2 and has been calculated in line with the rules of the Guide to the Expression of Uncertainty in Measurement (GUM), taking into account environmental conditions, aging, wear and tear.

Device settings and GUI parameters are indicated as follows: "parameter: value".

Typical data as well as nominal and measured values are not warranted by Rohde & Schwarz.

# Base unit

# **Vertical system**

Input channels	R&S®RTB2002	2 channels	
	R&S®RTB2004	4 channels	
Input impedance			
Analog bandwidth (-3 dB)	R&S®RTB2002 and R&S®RTB2004	> 70 MHz	
	R&S®RTB2002 with -B221 option and	> 100 MHz	
	R&S®RTB2004 with -B241 option		
	R&S®RTB2002 with -B222 option and	> 200 MHz	
	R&S®RTB2004 with -B242 option		
	R&S®RTB2002 with -B223 option and	> 300 MHz	
	R&S®RTB2004 with -B243 option		
Lower frequency limit (–3 dB)	at AC coupling	< 2 Hz (meas.)	
Analog bandwidth limits (max. –1.8 dB, min. –3.5 dB)	R&S®RTB2002 and R&S®RTB2004	20 MHz	
Rise time (10 % to 90 %, calculated)	R&S®RTB2002 and R&S®RTB2004	< 5 ns	
. 1.55 1 10 (10 /0 to 50 /0, odiodiatod)	R&S®RTB2002 with -B221 option and	< 3.5 ns	
	R&S®RTB2004 with -B241 option	V 0.0 115	
	R&S®RTB2002 with -B222 option and	< 1.75 ns	
	R&S®RTB2004 with -B242 option		
	R&S®RTB2002 with -B223 option and	< 1.15 ns	
	R&S®RTB2004 with -B243 option		
Vertical resolution		10-bit, up to 16-bit with high-resolution	
		decimation mode	
DC gain accuracy	offset and position = 0,		
	maximum operating temperature change of ±5 °C after self-alignment		
	input sensitivity > 5 mV/div	±1.5 % of full scale	
	input sensitivity ≤ 5 mV/div	±2 % of full scale	
Offset accuracy		±0.5 % ± 0.1 div ± 1 mV	
DC measurement accuracy	after adequate suppression of	±(DC gain accuracy ×  reading -offset	
•	measurement noise by using high-	setting  + offset accuracy)	
	resolution sampling mode or waveform		
	averaging		
Input coupling		DC, AC, GND	
Input sensitivity		1 mV/div to 5 V/div	
Maximum input voltage		300 V (RMS), max. 400 V (V <sub>p</sub> ), derates at	
		20 dB/decade to 5 V (RMS) above	
		250 kHz	
Offset range	input sensitivity		
	200 mV/div to ≤ 5 V/div	±40 V	
	1 mV/div to < 200 mV/div	±1.2 V	
Channel-to-channel isolation (each channel at same input sensitivity)	input frequency < analog bandwidth	> 50 dB	

# **Horizontal system**

Timebase range		selectable between 1 ns/div and 500 s/div
Channel deskew		±500 ns
Trigger offset range	min.	memory depth/actual sampling rate
	max.	2 <sup>33</sup> /actual sampling rate
Modes		normal, roll ≥ 50 ms/div
Timebase accuracy	after delivery/calibration, at +23 °C	±2.5 ppm
	during calibration interval	±3.5 ppm

# **Acquisition system**

Maximum realtime sampling rate	normal mode	1.25 Gsample/s
	interleaved mode,	2.5 Gsample/s
	following channels are not used	
	simultaneously:  • channel 1 and channel 2	
	channel 3 and channel 4	
	<ul> <li>logic channels</li> </ul>	
Memory depth per channel	normal	10 Msample per channel
	If following channels are not used simultaneously:  channel 1 and channel 2  channel 3 and channel 4	20 Msample per channel
	logic channels	
Acquisition modes	sample	first sample in decimation interval
	peak detect	largest and smallest sample in decimation interval
	high resolution	average value of all samples in decimation interval
	envelope	envelope of acquired waveforms
	average	average over a series of acquired waveforms
	envelope + peak detect	envelope of acquired waveforms with
		active peak detect
Number of averaged waveforms		2 to 100 000
Waveform acquisition rate	dot display, single channel, auto record length	up to 50 000 waveforms/s

# **Trigger system**

Trigger level	range (min)	±5 div from center of screen
Trigger modes		auto, normal, single,
		n single with R&S®RTB-K15 option
Hold-off range	time	inactive or 50 ns to 10 s
Trigger types		edge, width, video, pattern, serial bus, timeout, line
Edge trigger	trigger events	rising edge, falling edge, both edges
	sources	
	R&S®RTB2002	channel 1, channel 2, logic channels from D0 to D15 (with R&S®RTB-B1 option),
	Do O®DTDooo 4	external trigger input
	R&S®RTB2004	channel 1, channel 2, channel 3,
		channel 4, logic channels from D0 to D15 (with R&S®RTB-B1 option), external
		trigger input
	coupling (analog channels, external trigger	DC, AC,
	input)	HF reject (attenuates > 50 kHz (meas.)),
		LF reject (attenuates < 50 kHz (meas.)),
		noise reject (enlarges trigger hysteresis)
Width trigger	trigger events	pulse width is smaller, greater, equal, unequal, inside interval, outside interval
	min. pulse width	6.4 ns
	max. pulse width	13.5 s
	polarity	positive, negative
	sources	11-2-2-3
	R&S®RTB2002	channel 1, channel 2, logic channels from D0 to D15 (with R&S®RTB-B1 option)
	R&S®RTB2004	channel 1, channel 2, channel 3,
		channel 4, logic channels from D0 to D15
		(with R&S®RTB-B1 option)

### Version 06.00, August 2018

Video trigger	trigger events	selectable line, all lines, even frame, odd frame, all frames	
	supported standards	PAL, NTSC, SECAM, PAL-M, SDTV 576i, HDTV 720p, HDTV 1080i, HDTV 1080p	
	sources		
	R&S®RTB2002	channel 1, channel 2, external trigger input	
	R&S®RTB2004	channel 1, channel 2, channel 3,	
		channel 4, external trigger input	
	sync pulse polarity	positive, negative	
Pattern trigger	trigger events	logic condition between active channels	
	sources		
	R&S®RTB2002	channel 1, channel 2, logic channels from D0 to D15 (with R&S®RTB-B1 option)	
	R&S <sup>®</sup> RTB2004	channel 1, channel 2, channel 3, channel 4, logic channels from D0 to D15 (with R&S®RTB-B1 option)	
	state of channels	high, low, don't care	
	logic between channels	and/or	
	condition	true, false	
	duration condition	smaller, greater, equal, unequal, inside	
		interval, outside interval, timeout	
	min. duration time	6.4 ns	
	max. duration time	13.5 s	
Serial bus trigger	supported standards		
	R&S®RTB-K1 option	I <sup>2</sup> C/SPI (two- and three-wire)	
	R&S®RTB-K2 option	UART/RS-232/RS-422/RS-485	
	R&S®RTB-K3 option	CAN/LIN	
Trigger sensitivity	with DC, AC, LF reject		
R&S®RTB2002/R&S®RTB2004	input sensitivity > 5 mV/div	< 0.8 div (meas.)	
	2 mV/div ≤ input sensitivity < 5 mV/div	< 1.5 div (meas.)	
	input sensitivity < 2 mV/div	< 2 div (meas.)	
	with HF reject		
	all input sensitivities	< 1 div (meas.)	
External trigger input	input impedance		
	R&S®RTB2002/R&S®RTB2004	1 MΩ ± 2 % with 9 pF ± 2 pF (meas.)	
	maximum input voltage at 1 mΩ	300 V (RMS), max. 400 V (V <sub>p</sub> ),	
	·	derates at 20 dB/decade to 5 V (RMS) above 250 kHz	
	trigger level	±5 V	
	sensitivity	300 mV (V <sub>pp</sub> )	
	input coupling	DC, AC, LF reject, HF reject	
Trigger output (AUX OUT connector)	functionality	A pulse is generated for every acquisition trigger event.	
	output voltage		
	at high impedance	0 V to 4.8 V	
	at 50 Ω	0 V to 2.4 V	
	pulse polarity	high active	
	output delay	depends on trigger settings	

### **Waveform measurements**

Automatic measurements	measurements on channels, math waveforms, reference waveforms	burst width, count positive pulses, count negative pulses, count falling edges, count rising edges, mean value, RMS cycle, RMS, mean cycle, peak+, peak-, frequency, period, amplitude, base level, pos overshoot, neg overshoot, pulse width, duty cycle+, duty cycle-, rise time, fall time, delay, phase
	measurements on trigger signal	trigger period, trigger frequency implemented by means of six-digit hardware counter
	reference levels	lower, middle and upper level in percentage
	statistics	maximum, minimum, mean, standard deviation and measurement count for each automatic measurement
	number of active measurements	4
Cursor	type	vertical, horizontal, vertical and horizontal, V-marker
	functions	x and y tracking, coupling of cursors, set to trace, set to screen
Quick measurements	function	fast overview of measurements from one channel, some measurements displayed with result lines in diagram
	sources	, miles in analysmin
	R&S®RTB2002	channel 1, channel 2
	R&S®RTB2004	channel 1, channel 2, channel 3, channel 4
	measurements displayed in diagram	mean, max. peak, min. peak, rise time, fall time
	numerically displayed measurements	RMS cycle, peak-to-peak voltage, period, frequency

# **Digital voltmeter**

Accuracy		related to channel settings of voltmeter
		source
Measurements		DC, AC + DC (RMS), AC (RMS)
Sources	R&S®RTB2002	channel 1, channel 2
	R&S®RTB2004	channel 1, channel 2, channel 3,
		channel 4
Number of measurements		up to 4
Resolution		up to 3 digits
Bandwidth		1 MHz

# Frequency counter

Measurements		frequency, period
Sources	R&S®RTB2002	trigger signal source (edge, video): line,
		channel 1, channel 2, external trigger in
	R&S®RTB2004	trigger signal source (edge, video): line,
		channel 1, channel 2, channel 3,
		channel 4, external trigger in
Number of measurements		2
Resolution		6 digits
Frequency range		0. 05 Hz to bandwidth of scope (limited by
		bandwidth of trigger filter)

# Mask testing

Sources	R&S®RTB2002	channel 1, channel 2
	R&S®RTB2004	channel 1, channel 2, channel 3,
		channel 4
Mask definition		acquired waveform with user-defined
		tolerance, can be stored and restored
Result statistics		completed acquisitions, passed and failed
		acquisitions (absolute and in percent),
		test duration
Actions on mask violation		sound, acquisition stop, screenshot, save
		waveform, pulse out (AUX OUT
		connector)

### **Waveform maths**

Number of math waveforms		1
Functions		addition, subtraction, multiplication, division
Sources	R&S®RTB2002	channel 1, channel 2
	R&S <sup>®</sup> RTB2004	channel 1, channel 2, channel 3, channel 4
FFT	sources	
	R&S®RTB2002	channel 1, channel 2, reference waveform
	R&S®RTB2004	channel 1, channel 2, channel 3, channel 4, reference waveform
	setup parameters	start frequency, stop frequency, center frequency, frequency span, vertical scale, vertical position
	windows	Hanning, Hamming, Blackman, rectangular, flat top
	waveform arithmetic	none, envelope, average (selectable 2 to 100 000)

### **Search function**

Functions	search types	edge, width, peak, rise/fall time, runt, data2clock, pattern, protocol (available with R&S®RTB-K3 option)
	configuration	manual level setting, adjustable hysteresis
	display of search events	in diagram (markers) and in result table
Sources	R&S®RTB2002	channel 1, channel 2, math waveform, D0 to D15 (with R&S®RTB-B1 option)
	R&S®RTB2004	channel 1, channel 2, channel 3, channel 4, math waveform, D0 to D15 (with R&S®RTB-B1 option)

# **Display characteristics**

Diagram types	manually changeable vertical window size	Yt, XY, zoom, FFT
XY mode		parallel display of XY diagram and
		Yt diagrams of input signals for X, Y
Zoom		horizontal zoom with fast navigation, split
		screen with overview signal and zoomed
		signal
FFT mode		split screen with Yt diagrams and
		dedicated frequency diagram
Interpolation		sin(x)/x, linear, sample & hold
Waveform display		lines, dots only
Persistence		50 ms to 12.8 s, infinite
		inverse brightness, waveform color modes
Special display mode		for analog channels (temperature, fire,
		rainbow)
Diagram grid		lines, reticle, none, with annotation, track
		grid
Reference signals		up to 4 reference signals
Sources		analog and digital channels, math,
		reference, spectrum

# **Protocol and logic**

Bus decode	number of bus signals	2 1
	bus types	parallel, parallel clocked
	R&S®RTB-K1 option	SPI (2-wire, 3-wire, 4-wire <sup>1</sup> ), I <sup>2</sup> C
	R&S®RTB-K2 option	UART/RS-232/RS-422/RS-485
	R&S®RTB-K3 option	CAN, LIN
	display types	decoded bus, logical signal,
		frame table (depends on decoded bus)
	data format of decoded bus	hex, decimal, binary

### Miscellaneous

Save/recall	device settings	save and recall on internal file system or USB flash drive or on a PC via web interface or USB-MTP (media transfer protocol)
	reference waveforms	save and recall on internal file system or USB flash drive or on a PC via web interface or USB-MTP
	waveforms	save on USB flash drive or download and save on a PC via web interface or USB-MTP; available file formats: BIN, CSV, TXT float (MSB/LSB first)
	screenshots	save on USB flash drive or download and save on a PC via web interface or USB-MTP; available file formats: BMP, PNG
Camera button (one touch)		configurable button, actions on press:     save device settings (setup)     save waveforms     save screenshot     search/bus/statistic results
Instrument security		secure erasure of internal file system and all settings

<sup>&</sup>lt;sup>1</sup> If a bidirectional bus is used (e.g. UART RX/TX or SPI MOSI/MISO), two bus decoders are occupied.

Menu languages	available menu languages:
	English
	German
	French
	Spanish
	Italian
	Portuguese
	Czech
	Polish
	Russian
	Simplified Chinese
	Traditional Chinese
	Korean
	Japanese
Help	online help, available languages:
	English
Jndo/redo	undo/redo function

# Input and outputs

Front		
Channel inputs		BNC,
		for details see Vertical system
External trigger input		BNC, for details see Trigger system
AUX OUT (BNC)	trigger out	for details see Trigger system
	reference frequency	10 MHz ± 3.5 ppm (meas.)
	mask violation	pulse
	waveform generator (with R&S®RTB-B6	for details see Waveform generator
	option only)	N 21/1/ 27/1/
Probe compensation output	signal shape rectangle	$V_{low} = 0 \text{ V}, V_{high} = 2.5 \text{ V (meas.)}$
	frequency	1 kHz during probe adjust setup or manual
		configurable
Pattern source (with R&S®RTB-B6 option	P3 to P0 (with R&S®RTB-B6 option only)	4 lugs, for details see 4-bit pattern
only)		generator
Digital channel inputs	D15 to D8, D7 to D0	with R&S®RTB-B1 option only
Ground lug		connected to ground
USB host interface		1 port, type A plug, version 2.0,
		memory sticks only
Rear		
USB device interface		1 port, type B plug, version 2.0
Ethernet interface		1 port, 1 Gbit
Security slot		for standard Kensington style lock
Fixation loop		for securing the instrument with a cable

# **General data**

Display		
Туре		10.1" WXGA display with capacitive touch
Resolution		1280 x 800 pixel (WXGA)
Temperature		
Temperature loading	operating temperature range	0 °C to +50 °C
	storage temperature range	-40 °C to +70 °C
Climatic loading		+25 °C/+40 °C at 85 % rel. humidity cyclic, in line with IEC 60068-2-30
Altitude		
Operating		up to 3000 m above sea level
Nonoperating		up to 4600 m above sea level
Mechanical resistance		
Vibration	sinusoidal	5 Hz to 150 Hz, max. 1.8 g at 55 Hz; 0.5 g from 55 Hz to 150 Hz, in line with EN 60068-2-6 MIL-PRF-28800F, 4.5.5.3.2 sinusoidal vibration, class 3 and 4
	random	10 Hz to 300 Hz, acceleration 1.2 g (RMS), in line with EN 60068-2-64, MIL-PRF-28800F, 4.5.5.3.1 random vibration, class 3 and 4
Shock		40 g shock spectrum, in line with MIL-STD-810E, method no. 516.4, procedure I, MIL-PRF-28800F, 4.5.5.4.1 functional shock, 30 g, 11 ms, halfsine
Maximum of sound pressure level		28.3/30.2 dB (A) at 1.0/0.8 m distance (at +23 °C, 947 mbar (hPa), 20 % rel. humidity), in line with ISO EN 3744
EMC		
RF emission		in line with CISPR 11/EN 55011 group 1 class A (for a shielded test setup); the instrument complies with the emission requirements stipulated by EN 55011, EN 61326-1 and EN 61326-2-1 class A, making the instrument suitable for use in industrial environments
Immunity		in line with IEC/EN 61326-1 table 2, immunity test requirements for industrial environments <sup>2</sup>
Certifications		VDE, cCSA <sub>US</sub>
Calibration interval		1 year
Power supply	<u>'</u>	
AC supply		100 V to 240 V at 50 Hz to 400 Hz, 0.95 A to 0.5 A
Power consumption		max. 60 W
Safety		in line with IEC 61010-1, EN 61010-1, CAN/CSA-C22.2 No. 61010-1-04, UL 61010-1
Power consumption in stand-by  Mechanical data		0.5 W (meas.)
Dimensions	W×H×D	390 mm × 220 mm × 152 mm (15.4 in × 8.66 in × 5.98 in)
Weight	(nom.)	2.5 kg (5.5 lb)

\_

<sup>&</sup>lt;sup>2</sup> Test criterion is displayed noise level within ±1 div for input sensitivity of 5 mV/div.

# **Options**

### R&S®RTB-B1

Vertical system Input channels		16 logic channels (D15 to D0)
Arrangement of input channels		16 logic channels (D15 to D0) arranged in two logic probes with
Arrangement of input channels		8 channels each, assignment of the logic
		probes to the channels D15 to D8 and D7 to D0
Input impedance		100 kΩ $\pm$ 2 %    ~4 pF (meas.) at probe tips
Maximum input frequency	signal with minimum input voltage swing and hysteresis setting: normal	300 MHz (meas.)
Maximum input voltage	, , , , , , , , , , , , , , , , , , , ,	±40 V (V <sub>p</sub> )
Minimum input voltage swing	hysteresis small	300 mV (V <sub>pp</sub> ) (meas.)
, ,	hysteresis medium	800 mV (V <sub>DD</sub> ) (meas.)
	hysteresis large	1500 mV (V <sub>pp</sub> ) (meas.)
Threshold groups	, ,	D15 to D8 and D7 to D0
Threshold level	range	-2 V to 8 V in 10 mV steps
	predefined	CMOS 5.0 V, CMOS 3.3 V, CMOS 2.5 V, TTL, ECL
Threshold accuracy		±(100 mV + 3 % of threshold setting) (meas.)
Comparator hysteresis		small, medium, large
Horizontal system	<u> </u>	, , ,
Channel-to-channel skew		max. 800 ps (meas.)
Acquisition system		
Sampling rate		1.25 Gsample/s for every channel
Memory depth		10 Msample for every channel
Trigger system		see Trigger system
Waveform measurements		
Measurement sources		all channels from D15 to D0
Automatic measurements		positive pulse width, negative pulse width period, frequency, burst width, delay,
		phase, positive duty cycle, negative duty
		cycle, positive pulse count, negative puls
		count, rising edge count, falling edge
		count, value at the cursor position
Additional cursor function		display of decoded parallel bus value at the cursor position
Display characteristics	I .	
Channel activity display		independent of the scope acquisition, the
		state (stays low, stays high or toggles) of
		the channels from D15 to D0 is displayed

# R&S®RTB-B6

Waveform generator and 4-bit p	attern generator	
Waveform generator	-	
Resolution		14-bit
Sample rate		250 Msample/s
Amplitude	level	·
•	high Z	20 mV to 5 V (V <sub>pp</sub> )
	50 Ω	10 mV to 2.5 V (V <sub>pp</sub> )
	accuracy	3 %
DC offset	level	-   -   -   -   -   -   -   -   -   -
	high Z	±2.5 V
	50 Ω	±1.25 V
	accuracy	3 % or ± 5 mV whatever is greater
Sine	frequency	0.1 Hz to 25 MHz
5110	SFDR	> 40 dBc (meas.)
	THD	> 40 dBc (meas.)
Dulas/rostando		0.1 Hz to 10 MHz
Pulse/rectangle	frequency	0.1 Hz to 1 MHz
Ramp/triangle	frequency	
Arbitrary	sample rate	max. 10 Msample/s
Mata a	memory depth	16k points
Noise	bandwidth	max. 25 MHz
	level	0 % to 100 % of signal amplitude
Modulation	AM	
	function	sine, rectangle, triangle, ramp
	frequency	0.1 Hz to 1 MHz
	depth	0 % to 100 %
	FM	
	function	sine, rectangle, triangle, ramp
	frequency	0.1 Hz to 1 MHz
	deviation	depends on modulation frequency
	ASK	
	function	sine, rectangle, triangle, ramp
	frequency	0.1 Hz to 1 MHz
	ASK depth	0 % to 100 %
	FSK .	1
	function	sine, rectangle, triangle, ramp
	frequency	0.1 Hz to 1 MHz
	FSK rate	0.1 Hz to carrier frequency/2
Sweep	start frequency	1 Hz to 25 MHz
2ssp	stop frequency	1 Hz to 25 MHz
	sweep time	1 ms to 10 s
	sweep type	linear, logarithmic
4-bit pattern generator	Sweep type	inical, logarithmic
Functions		probe adjust/square wave, bus signal
unctions		source 4-bit counter, programmable 4-bit
		pattern
Proho adjust		1 kHz/1 MHz square wave signal
Probe adjust		approx. 2.5 V ( $V_{pp}$ ) (tr < 4 ns)
Bus signal source		SPI, I <sup>2</sup> C, UART
	h an de diddh	
4 hit counter	bandwidth	9600 bit/s to 1 Mbit/s
4-bit counter	frequency	1 mHz to 25 MHz
Programmable pattern	sample rate	20 ns to 1 s, up/down
	memory depth	2048 bit
	pattern idle time	50 ns to 1 s

# R&S®RTB-Bxx bandwidth upgrades

Option	Model	Analog bandwidth upgrade from 70 MHz to
R&S®RTB-B221	R&S®RTB2002	100 MHz
R&S®RTB-B222	R&S®RTB2002	200 MHz
R&S®RTB-B223	R&S®RTB2002	300 MHz
R&S®RTB-B241	R&S®RTB2004	100 MHz
R&S®RTB-B242	R&S®RTB2004	200 MHz
R&S®RTB-B243	R&S®RTB2004	300 MHz

### R&S®RTB-K1

I <sup>2</sup> C triggering and decoding		
Bus configuration	sources for SCL and SDA	channel 1, channel 2, channel 3, channel 4, logic channels from D0 to D15
	bit rate	up to 10 Mbps
	size of address	7 bit or 10 bit
	size of data	8 bit
	label list	associate frame identifier with symbolic ID
Trigger	trigger events	start, stop, restart, missing acknowledge, address (7 bit or 10 bit), data, address and data
	offset for trigger on data	0 data byte to 4095 data byte
	data pattern width	up to 3 sequential data byte
Decode	displayed signals	bus signal, logic signal or both
	color coding of bus signal	address, data, start, stop, ACK, NACK;
		error and trigger event are displayed in different colors
	displayed format of address	hex
	displayed format of data	ASCII, binary, decimal or hex
SPI triggering and decoding		
Bus configuration	sources for CS, CLK, MOSI and MISO	channel 1, channel 2, channel 3, channel 4, logic channels from D0 to D15
	bit rate	up to 25 Mbps
	chip select (CS)	active low, active high or missing (two-wire SPI)
	clock (CLK) slope	rise or fall
	data symbol size	1 bit to 32 bit
	idle time for two-wire SPI	< 1 ms
Trigger	trigger events	start of frame, end of frame, bit number, data pattern
	selectable bit number	0 to 4095
	offset for trigger on data pattern	0 to 4095 bit
	data pattern size	1 bit to 32 bit
Decode	displayed signals	bus signal, logic signal or both
	color coding of bus signal	data, start, stop; error and trigger event are displayed in different colors
	displayed format of data	ASCII, binary, decimal or hex
	data decoding	MSB or LSB first

### R&S®RTB-K2

UART/RS-232/RS-422/RS-485	5 triggering and decoding	
Bus configuration	source for RX and TX	channel 1, channel 2, channel 3, channel 4, logic channels from D0 to D15
	bit rate	300/600/1200/2400/4800/9600/19200/ 38400/57600/115200 bps or user-selectable up to 3 Mbps
	end of frame	timeout, none
	signal polarity	idle low, idle high
	data symbol size	5 bit to 9 bit
	parity	none, even or odd
	stop bits	1, 1.5 or 2
Trigger	trigger events	start bit, start of frame, symbol number, any symbol, pattern of symbols, parity error, frame error, break
	offset for trigger on data symbol	0 to 4095 symbols
	data symbol pattern width	1 to floor (32/symbol size) symbols
Decode	displayed signals	bus signal, logic signal or both
	color coding of bus signal	data, start, stop; error and trigger event are displayed in different colors
	displayed format of data	ASCII, binary, decimal or hex

# R&S®RTB-K3

CAN triggering and decoding	9	
Bus configuration	signal type	CAN_H, CAN_L
	sources	channel 1, channel 2, channel 3,
		channel 4, logic channels from D0 to D15
	bit rate	10/20/33.3/50/83.3/100/125/250/500/
		1000 kbps or user-selectable in range
		from 100 bps to 2 Mbps
	sampling point	10 % to 90 % within bit period
	label list	associate frame identifier with symbolic ID
Trigger	trigger events	start of frame, frame type, identifier,
		identifier + data, error condition (any
		combination of CRC error, bit stuffing
		error, form error and ACK error)
	identifier setup	frame type (data, remote or both),
		identifier type (11 bit or 29 bit);
		condition =, $\neq$ , >, <; identifier selectable
		from label list
	data setup	data pattern up to 8 byte (hex or binary);
		condition =, $\neq$ , >, <
Decode	displayed signals	bus signal, logic signal or both
	color coding of bus signal	start of frame, identifier, DLC, data
		payload, CRC, ACK, end of frame, error
		frame, overload frame, CRC error, bit
		stuffing error, ACK error
	displayed format of data	hex, decimal, binary, ASCII
	frame table	decode results displayed as tabulated list,
		errors highlighted in red; three table
		positions (top, bottom, full screen); frame
		navigation; data export as CSV file
Search	search events	frame, error, identifier, identifier + data,
		identifier + error
	frame event setup	start of frame, end of frame, overload
		frame, error frame, data ID 11 bit, data ID
		29 bit, remote ID 11 bit, remote ID 29 bit
	error event setup	any combination of CRC error, bit stuffing
		error, form error and ACK error
	identifier setup	frame type (data, remote or both),
		identifier type (11 bit or 29 bit);
		condition =, $\neq$ , >, <; identifier selectable
		from label list
	data setup	data pattern up to 8 byte (hex or binary);
		condition =, ≠, >, <
	event table	search results displayed as tabulated list;
		event navigation

### Version 06.00, August 2018

Bus configuration	version	1.3, 2.x or SAE J602; mixed traffic is		
		supported		
	bit rate	1.2/2.4/4.8/9.6/10.417/19.2 kbps or user-		
		selectable in range from 1 kbps to 2.5		
		Mbps		
	polarity	active high or active low		
	label list	associate frame identifier with symbolic ID		
Trigger	source	any input channel		
	trigger events	start of frame (sync break), identifier,		
		identifier + data, wakeup frame, error		
		condition (any combination of checksum		
		error, parity error and sync field error)		
	identifier setup	range from 0d to 63d; condition =, ≠, >, <		
		identifier selectable from label list		
	data setup	data pattern up to 8 byte (hex or binary);		
		condition =, ≠, >, <		
Decode	displayed signals	bus signal, logic signal or both		
	color coding of bus signal	frame, frame identifier, parity, data		
		payload, checksum, error condition		
	displayed format of data	hex, decimal, binary, ASCII		
	frame table	decode results displayed as tabulated list		
		errors highlighted in red; three table		
		positions (top, bottom, full screen); frame		
		navigation; data export as CSV file		
Search	search events	frame, error, identifier, identifier + data,		
	frame a suspet patrix	identifier + error		
	frame event setup	start of frame, wake up		
	error event setup	any combination of checksum error, parity		
	i do estifica e o otras	error and sync field error		
	identifier setup	range from 0d to 63d; condition =, ≠, >, < identifier selectable from label list		
	data setup	data pattern up to 8 byte (hex or binary); condition =, $\neq$ , >, <		
	event table	search results displayed as tabulated list; event navigation		

# R&S®RTB-K15

History and segmented memory Memory segmentation	function additional memory segments			nts for the		
		acquisition	, ,			
	number of segments <sup>3</sup>	record	segments	total memory		
		length	(up to)	(per channel)		
		10 ksample	13 107	131 Msample		
		20 ksample	13 107	262 Msample		
		50 ksample	4 369	218 Msample		
		100 ksample	2 621	262 Msample		
		200 ksample	1 456	291 Msample		
		500 ksample	624	312 Msample		
		1 Msample	319	319 Msample		
		2 Msample	159	318 Msample		
		5 Msample	64	320 Msample		
		10 Msample	32	320 Msample		
		20 Msample	16	320 Msample		
	Segmentation is active on all analog and logic channels, protocol decoding and spectrum analysis.					
Fast-segmented mode	continuous recording of waveforms in acquisition memory without interruption due to visualization; blind time between consecutive acquisitions less than 2.5 µs (up to 300 000 waveforms/s)					
History mode	function		The history mode always provides access to past acquisitions in the segmented memory.			
	timestamp resolution	6.4 ns	6.4 ns			
	history player	stop waveforr	replays the recorded waveforms; start and stop waveform could be set; repetition possible			

<sup>&</sup>lt;sup>3</sup> In interleaved mode.

# **Ordering information**

Designation	Туре	Order No.	
Choose your R&S®RTB2000 base model			
Oscilloscope, 70 MHz, 2 channels	R&S®RTB2002	1333.1005.02	
Oscilloscope, 70 MHz, 4 channels	R&S®RTB2004	1333.1005.04	
Base unit (including standard accessories: R&S®RT-ZP03 passive prob	pe per channel, power cord)		
Choose your bandwidth upgrade			
Upgrade of R&S®RTB2002 oscilloscopes to 100 MHz bandwidth	R&S®RTB-B221	1333.1163.02	
Upgrade of R&S®RTB2002 oscilloscopes to 200 MHz bandwidth	R&S®RTB-B222	1333.1170.02	
Upgrade of R&S®RTB2002 oscilloscopes to 300 MHz bandwidth	R&S®RTB-B223	1333.1186.02	
Upgrade of R&S®RTB2004 oscilloscopes to 100 MHz bandwidth	R&S®RTB-B241	1333.1257.02	
Upgrade of R&S®RTB2004 oscilloscopes to 200 MHz bandwidth	R&S®RTB-B242	1333.1263.02	
Upgrade of R&S®RTB2004 oscilloscopes to 300 MHz bandwidth	R&S®RTB-B243	1333.1270.02	
Choose your options			
Mixed Signal Option for non-MSO models, 300 MHz	R&S®RTB-B1	1333.1105.02	
Arbitrary Waveform Generator	R&S®RTB-B6	1333.1111.02	
I <sup>2</sup> C/SPI Serial Triggering and Decoding	R&S®RTB-K1	1333.1011.02	
UART/RS-232/RS-422/RS-485 Serial Triggering and Decoding	R&S <sup>®</sup> RTB-K2	1333.1028.02	
CAN/LIN Serial Triggering and Decoding	R&S®RTB-K3	1333.1034.02	
History and Segmented Memory	R&S®RTB-K15	1333.1040.02	
Application Package (-K1, -K2, -K3, -K15)	R&S®RTB-PK1	1333.1092.02	
Choose your additional probes			
Single-ended passive probes			
300 MHz, 10 MHz, 10:1/1:1, 10 MΩ/1 MΩ, 400 V, 12 pF/82 pF	R&S®RT-ZP03	3622.2817.02	
500 MHz, 500 MHz, 10:1, 300 V (RMS), 10 pF	R&S®RT-ZP05	3623.2927.02	
500 MHz, 10 MΩ, 10:1, 400 V, 9.5 pF	R&S®RTM-ZP10	1409.7708.02	
38 MHz, 1 MΩ, 1:1, 55 V, 39 pF	R&S®RT-ZP1X	1333.1370.02	
High-voltage single-ended passive probes	I.		
250 MHz, 100:1, 100 MΩ, 850 V, 6.5 pF	R&S®RT-ZH03	1333.0873.02	
400 MHz, 100:1, 50 MΩ, 1000 V, 7.5 pF	R&S®RT-ZH10	1409.7720.02	
400 MHz, 1000:1, 50 MΩ, 1000 V, 7.5 pF	R&S®RT-ZH11	1409.7737.02	
Current probes	1	1	
20 kHz, AC/DC, 10 A/1000 A	R&S®RT-ZC02	1333.0850.02	
100 kHz, AC/DC, 30 A	R&S®RT-ZC03	1333.0844.02	
10 MHz, AC/DC, 150 A	R&S®RT-ZC10	1409.7750.02	
100 MHz, AC/DC, 30 A	R&S®RT-ZC20	1409.7766.02	
120 MHz, AC/DC, 5 A	R&S®RT-ZC30	1409.7772.02	
Power Supply for current probes	R&S®RT-ZA13	1409.7789.02	
Active differential probes	100 117 21110	1 100.1 7 00.02	
100 MHz, 1000:1/100:1, 8 MΩ, 1000 V (RMS), 3.5 pF	R&S®RT-ZD01	1422.0703.02	
200 MHz, 10:1, 1 MΩ, 20 V diff., 3.5 pF	R&S®RT-ZD01	1333.0821.02	
Logic probes	NGO NY ZDOZ	1000.0021.02	
Active 8 Channel Logic Probe	R&S®RT-ZL03	1333.0715.02	
Probe accessories	NGO NT-ZEUG	1000.07 10.02	
Frobe accessories Feedthrough Termination 50 Ω	R&S®HZ22	3594.4015.02	
Probe Pouch	R&S®RT-ZA19	1335.7875.02	
Choose your accessories	RAS RI-ZAIS	1333.7073.02	
Front Cover	R&S®RTB-Z1	1333.1728.02	
Soft Case	R&S®RTB-Z3	1333.1726.02	
Rackmount Kit	R&S®ZZA-RTB2K	1333.1711.02	

Warranty			
Base unit	3 years		
All other items <sup>4</sup>	1 year		
Options			
Extended Warranty, one year	R&S®WE1	Please contact your	
Extended Warranty, two years	R&S®WE2	local Rohde & Schwarz	
Extended Warranty with Calibration Coverage, one year	R&S®CW1	sales office.	
Extended Warranty with Calibration Coverage, two years	R&S®CW2		
Extended Warranty with Accredited Calibration Coverage, one year	R&S®AW1		
Extended Warranty with Accredited Calibration Coverage, two years	R&S®AW2		

#### Extended warranty with a term of one and two years (WE1 and WE2)

Repairs carried out during the contract term are free of charge <sup>5</sup>. Necessary calibration and adjustments carried out during repairs are also covered.

### Extended warranty with calibration coverage (CW1 and CW2)

Enhance your extended warranty by adding calibration coverage at a package price. This package ensures that your Rohde & Schwarz product is regularly calibrated, inspected and maintained during the term of the contract. It includes all repairs <sup>5</sup> and calibration at the recommended intervals as well as any calibration carried out during repairs or option upgrades.

#### Extended warranty with accredited calibration (AW1 and AW2)

Enhance your extended warranty by adding accredited calibration coverage at a package price. This package ensures that your Rohde & Schwarz product is regularly calibrated under accreditation, inspected and maintained during the term of the contract. It includes all repairs <sup>5</sup> and accredited calibration at the recommended intervals as well as any accredited calibration carried out during repairs or option upgrades.

<sup>&</sup>lt;sup>4</sup> For options that are installed, the remaining base unit warranty applies if longer than 1 year. Exception: all batteries have a 1 year warranty.

<sup>&</sup>lt;sup>5</sup> Excluding defects caused by incorrect operation or handling and force majeure. Wear-and-tear parts are not included.

### Service that adds value

- Uncompromising qualityLong-term dependability

#### Rohde & Schwarz

The Rohde & Schwarz electronics group offers innovative solutions in the following business fields: test and measurement, broadcast and media, secure communications, cybersecurity, monitoring and network testing. Founded more than 80 years ago, the independent company which is headquartered in Munich, Germany, has an extensive sales and service network with locations in more than 70 countries.

www.rohde-schwarz.com

### Sustainable product design

- Environmental compatibility and eco-footprint
- Energy efficiency and low emissions
- Longevity and optimized total cost of ownership

Certified Quality Management ISO 9001

Certified Environmental Management ISO 14001

### Rohde & Schwarz training

www.training.rohde-schwarz.com

#### Regional contact

- Europe, Africa, Middle East | +49 89 4129 12345 customersupport@rohde-schwarz.com
- North America | 1 888 TEST RSA (1 888 837 87 72) customer.support@rsa.rohde-schwarz.com
- Latin America | +1 410 910 79 88 customersupport.la@rohde-schwarz.com
- Asia Pacific | +65 65 13 04 88 customersupport.asia@rohde-schwarz.com
- China | +86 800 810 82 28 | +86 400 650 58 96 customersupport.china@rohde-schwarz.com



